

High hinged column 6-8-10 meters

(Concept-V2)

Attention:

Read this manual before using the hinged column.

Always wear personal protection aqipment

Turning down the column:



Pic.01
Unscrew the 2 special bolts from the door.



Pic.02
Remove the door.



Pic.03
Remove the padlock.



Pic.04
Unscrew the locking bolt using a tool (dimension across flats-24 mm), so it lays free on the brace.



Pic.05
By pulling the pin down the hinge column will be unlocked.



Pic.06
Install the lifting handle into the winch.



Pic.07
By unscrewing the winch **counterclockwise** the arm will come out a little.



Pic.08
Bring the arm just past the dead point with your hand.



Pic.09
Tilt the column by turning the winch to the left.



Pic.10



Pic.11
Note: *Don't stand between the column and arm during operation.*



Pic.12
Keep turning until the column is tilted to the buffer. Make sure that the column is lowered slowly.

Turning up the column:



Pic. 13
Turn the winch **Clockwise** to see the column right. **Note:** Don't stand between the column and arm during operation.



Pic. 14
At the end, note that the ribbon isn't twisted and goes in the column without any knots.



Pic. 15
Take the lifting handle out of the winch.



Pic. 16
Lock the column by pushing the pin up. Put handle of the pin in the "parking position".



Pic. 17
Then tighten the locking bolt with the tool.
(dimension across flats-24 mm)



Pic. 18
Turn the handle of the pin' to the right, so it
lays on the brace.



Pic. 19
Place the padlock, so it blocks the handle.



Pic. 20
Re-fit the door.



*Pic.21
Tighten the 2 special bolts to the door.*